# Build-A-Box™

### **Modular Aluminum Trench Shielding System**



### Purpose:

The Build-A-Box™ Modular Aluminum Trench Shield System can be assembled in minutes to a wide variety of two, three, or four-sided configurations. This flexibility enables work crews to make on-the-spot design changes to meet job requirements in conditions ranging from light to extreme. Most systems are easily transported in a pick-up truck or trailer for quick application.

### **Common Applications:**

- Sewer & Water Valves
- Hydrants & Taps
- Spot Repairs
- Gas and Electric Utility

#### Features:

- Pick-up truck transportable
- Can be hand-assembled in minutes
- Narrow, smooth aluminum sidewalls reduce dirt build-up
- Tongue and groove design
- Stackable with XLAP<sup>™</sup> Aluminum Trench Shield
- Foam-filled
- Lifting Lugs
- Professional Engineer design and depth certification

### Options:

- T-connection cut-outs
- Sheeting Guide Frame
- Sectional or Full Length corner posts
- 3-Way T-Posts

### Spreader Options:

- Telescoping Adjustable Spreaders
- Height Adapter/Spreader Arches










# Build-A-Box™

## **Modular Aluminum Trench Shielding System**





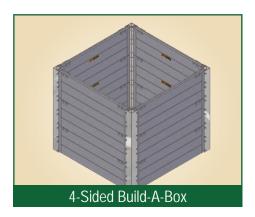


<b>Build-A-Box</b> ™ Modular Trench Shield - Two-Sided w/ Full Length or Sectional Corner Posts					
Panel Selection Chart		Shield Capacity	Depth of Cut (ft) - Soil Type		
Model (ft.)	Weight (Lbs.)	(PSF)	В	C-60	C-80
BBP-22 / BAB-2	34	2,400	53	40	30
BBP-23 / BAB-3	46	2,400	53	40	30
BBP-24 / BAB-4	60	2,400	53	40	30
BBP-25 / BAB-5	71	2,400	53	40	30
BBP-26 / BAB-6	84	2,400	53	40	30
BBP-27 / BAB-7	99	1,740	39	29	22
BBP-28 / BAB-8	110	1,440	32	24	18
BBP-29 / BAB-9	125	1200	27	20	15
BBP-210 / BAB-10	138	960	21	16	12
BBP-212 / BAB-12	165	780	17	13	10
BBP-214 / BAB-14	190	600	13	10	8
BBP-216 / BAB-16	210	480	11	8	6

Corner End Posts				
	Length	Weight		
Model	(In.)	(Lbs.)		
BBC-24	24	18		
BBC-48	48	36		
BBC-72	72	53		
BBC-96	96	69		
BBC-120	120	88		
BBC-144	144	126		

3-Way T-Posts				
	Length	Weight		
Model	(In.)	(Lbs.)		
BBT-24	24	19		
BBT-48	48	38		
BBT-72	72	57		
BBT-96	96	75		
BBT-120	120	95		
BBT-144	144	141		

ABAB Sheeting Guide Frames					
	Len	gth	Weight		
Model	(Ir	n.)	(I	Lbs.)	
BAB-SGF-4	48			119	
BAB-SGF-6	72			190	
BAB-SGF-8	96			245	
BAB-SGF-10	120			316	
BAluminum Sheets (with push caps)					
BAB-ALUM-SH	EET-6	72"		25 Lbs.	
BAB-ALUM-SHEET-8		96"	1	33 Lbs.	
<sup>C</sup> FILLER PANEL		8"		14 Lbs.	

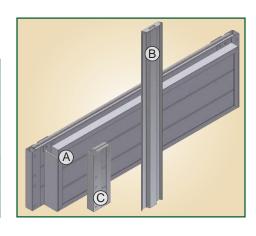

3-Way T-Post
Corner End Post

Spreaders Single Adj. Square Tube				
	Length	Weight		
Model	(In.)	(Lbs.)		
XL-1824-1	18 - 26	26		
XL-2436-1	24 - 36	36		
XL-3660-1	36 - 60	47		
XL-4872-1	48 - 72	62		
XL-6096-1	60 - 96	76		
XL-72108-1	72 - 108	89		
XL-84120-1	84 - 120	103		
XL-96144-1	96 - 144	133		

Arch Spreader and Extensions				
Model		Weight	Depth of Cut (ft)	
Length (In.)	Description	(Lbs.)	C-60 - Soil Type	
BBAC-ARCH 64	72" (high) x 48"	620	14	
BBAC-EXT24	24" Horiz. Extensions	110	14	
BBAC-EXT36	36" Horiz. Extensions	140	14	
BBAC-EXT48	48" Horiz. Extensions	170	14	
BBAC-EXT60	60" Horiz. Extensions	200	14	
BBAC-EXT72	72" Horiz. Extensions	230	14	
BBAC-EXT84	84" Horiz. Extensions	260	14	

## Accessories

















### Assembly


Stacked

BACK Panels

(3)


### Step 1

Attach 1st corner post to first panel and secure with pins and keepers.\* Set the BACK panel for 3 or 4-sided system and secure with pins and keepers in all matching holes.\*

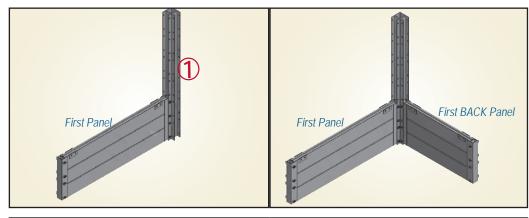

### Step 2

Stack the SIDE and BACK panels to desired height before installing the 2nd and 3rd corner posts. Ensure that all matching holes have a pin and keeper.\*

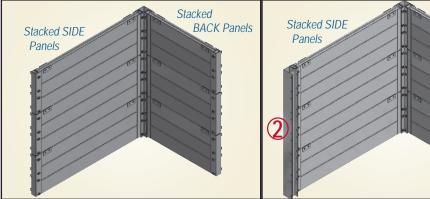


### Step 3

Stack opposite SIDE panels to desired height, then add either a 4th wall of panels for a 4-sided system; or a set of at least two spreaders for a 3-sided system.

### Step 4

The 4th corner post can then be slid into place. All matching holes require a pin and keeper.\* Note: A pry-bar may be needed to align posts with holes.

\* Always install pins with handle on the outside.

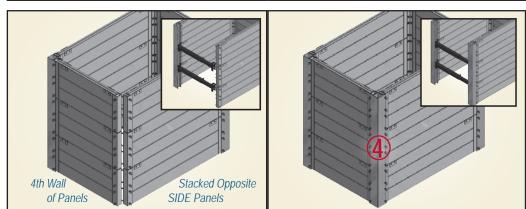

For Disassembly: Do above steps in reverse order. Remove pins & keeps one at a time from one spreader, post, or panel. DO NOT REMOVE ALL PINS AND KEEPERS AT ONE TIME.

#### NOTES

- 1. Assemble on level ground.
- 2. Lift with factory supplied lift eyes.
- 3. All matching holes must have a pin and keeper.
- 4. System must be used in accordance to manufactures tabulated data.
- 5. Bottom panel may be omitted, allowing 2 feet open clearance, only if there is no possible loss of soil from behind or below the bottom of the shield.



#### **Efficiency Production**

685 Hull Rd.

Mason, MI 48854 Phone: 800-552-8800 Fax: (517) 676-0375

